



Your new PIR will need programming, I hope the following will help. If not, please call Basesystems on 01772 886000 and we will talk you through it.

You are better taking the PIR down from the ceiling for this.

Take the PIR, the remote control and the blue touch key to where the receptor is mounted on the wall.

- Insert the blue touch key into the receptor on the wall and keep it held in.
- The Red light on the receptor will light up steady.
- After approx. 5 seconds the red light will flash rapidly.
- Remove touch key.
- Press and release the button on the front of the PIR. The alarm will bleep.
- Press and release the **LITTLE** button on the remote control. Again the alarm will bleep.
- Stand still and do nothing until the red light on the receptor goes out.

You're done.

You can test whether it has programmed in as follows

- Press the big button of the remote control and keep pressed.
- The alarm will emit the arm tone followed by a secondary tone to indicate test mode.
- Release the big button on the remote.
- Press the button on the PIR.
- The alarm will bleep to confirm seeing the PIR.
- Disarm the alarm as normal to exit.